

BenQ RP860K - Classroom Monitor

User Guide for Instructors

Pulled from: [RP860K User Manual](#) (at the user guide website select Download to view entire user guide)



Table of Contents

BenQ RP860K - Classroom Monitor	1
User Guide for Instructors	1
Turn On	2
Raise or Lower the Monitor	2
Using the touch screen	2
Adjusting audio volume level.....	3
Other Options:	3
• Annotating on the Monitor.....	3
• Document Camera	3
Turn Off Monitor:.....	3

Turn On




Select the **ON** button at the wall mounted controls. Then select PC or Laptop depending on whether you are using; the classroom PC or a laptop.

Raise or Lower the Monitor

There are 2 arrows on the side of the monitor, select the up arrow to raise the monitor and the down arrow to lower.



Using the touch screen

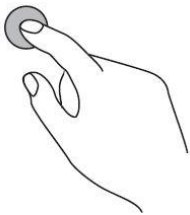

You can use the optical touch screen to control your operating system. The touch screen can emulate basic mouse functions. The following table shows a list of gestures you can use on the touch screen.

Click	Tap the screen once.
Double-click	Tap the screen twice.
Right-click	<ol style="list-style-type: none">1. Press on the target.2. Hold and wait for a blue ring to appear.3. Release your finger.
Drag	Drag one finger left or right.
Pan up / Pan down / Back / Forward	Quickly drag your finger (flick) in a desired direction.
Zoom	Move two fingers apart or toward each other.
Scroll	Drag one or two fingers up or down.

Adjusting audio volume level

Use the volume adjuster on the computer and/or adjust the volume from the wall mounted control panel.

Other Options:

- Annotating on the Monitor - See “Using Pen Software” user guides for writing/annotation options
- Document Camera - See “Document Camera Basics” user guide for projecting images from the document camera

Turn Off Monitor:

Be sure to select the **OFF** button at the wall mounted controls.

